

SMART SWITCH TECHNOLOGIES



TD-4000 Tank Monitor

Installation Manual

TD-4000 Master Display Unit (MDU)

Provides the following functions:

- visual indication of tank level (bar graph or lts / gals & percentage)
 - visual indication of battery voltage
 - turn water pump on or off
 - disable toilet when black tank full
 - all tanks are name programmable e.g. (Aft-Grey) (Port Fuel) (Water)
 - backlight
 - audible alarm
-

Electrical Specifications TD-4000

Supply Voltage	10 to 30 Volts DC (Auto-Sensing)
Quiescent Current	0.03 Amps
Data Retention	50 years (without power)

Outputs


The TD-4000 has two (open collector) outputs, which can be used to turn a relay ON or OFF.

These outputs can be used to control pumps e.g. Black discharge pump, or output 2 (only) can be programmed to activate a relay when the Black tank reaches the set alarm point to disable the toilet.

©


All technologies, design and Intellectual property is owned by
Smart Switch Technologies Ltd
PO Box 272 Waikanae, NZ.
Phone 0064-4 293-4201 0064-4 293-4201
Mobile: 0064-274-919-805
Email: info@smartswitch.co.nz Web: www.smartswitch.co.nz

Wiring Diagram for TD-4000

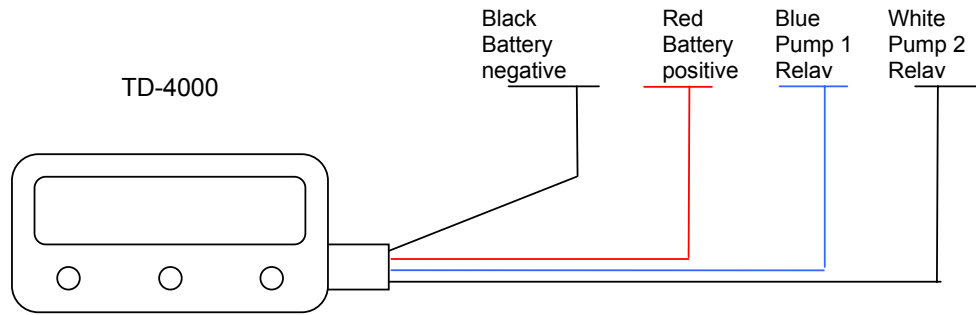


Pump Circuit Connection

To Blue or White wire on the TD-4000

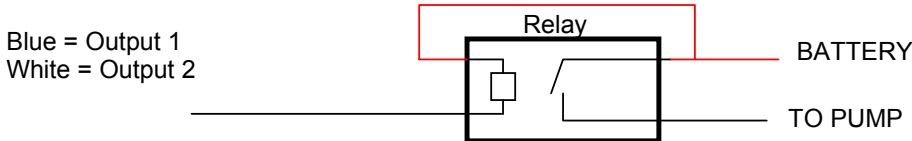

Disable Toilet Circuit Connection **NOTE: Output 2 ONLY**


To White wire on the TD-4000

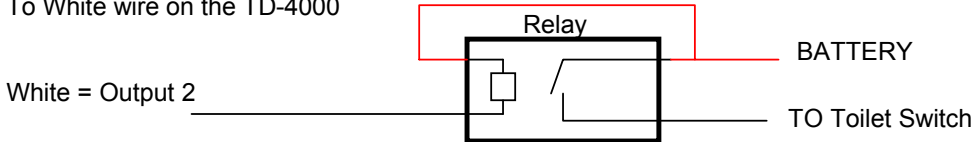

RJ-11 to three core cable


Part # RJ-STD

(Pressure sensor - phone cable connector to plug in green connector)

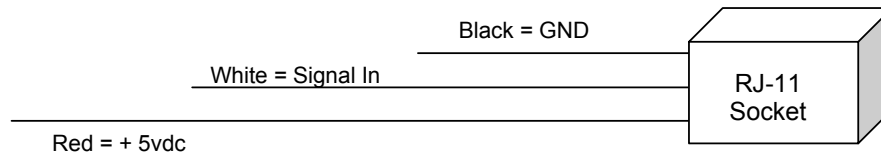


Battery Adaptor Wiring

Part # BAT-100

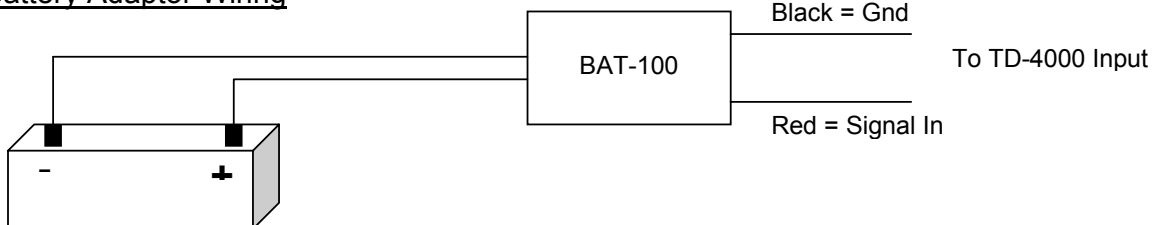

Connector Wiring

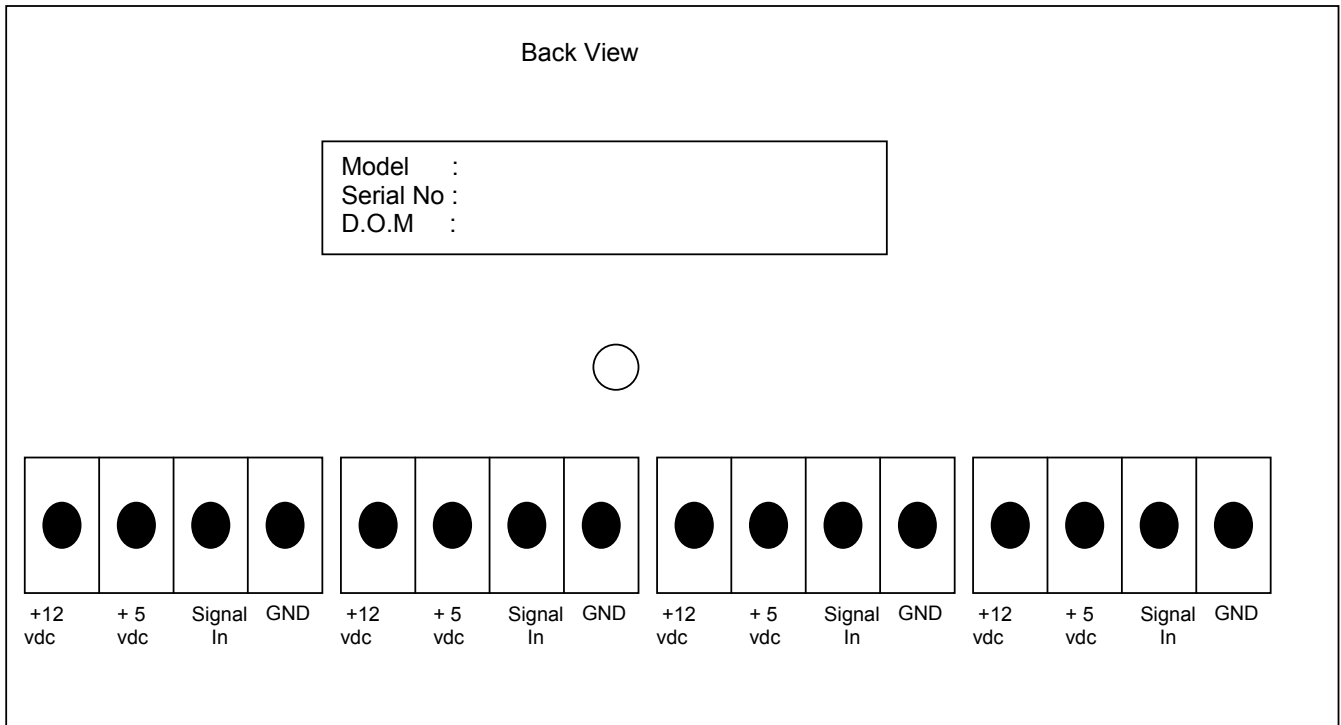

Connector Wiring For Ultra-Sonic

Gnd = Black on Ultra-Sonic Sensor
Signal In = Green on Ultra-Sonic Sensor
+ 12 vdc Out = Red on Ultra-Sonic Sensor
+ 5 vdc Out = **NOT USED** on Ultra-Sonic

Connector Wiring For Pressure

Gnd = Black on Pressure Sensor
Signal In = Green on Pressure Sensor
+ 5 vdc Out = Red on Pressure Sensor
+ 12 vdc Out = **NOT USED** on Pressure Sensor

WARNING: DO NOT CONNECT TO + 12 vdc

Connector Wiring For RJ-11 Adaptor


Gnd = Black
Signal In = White
+ 5 vdc Out = Red
+ 12 vdc Out = **NOT USED** on Pressure Sensor

WARNING: DO NOT CONNECT TO + 12 vdc


Connector Wiring For BAT-100

Gnd = Black from Bat-100
Signal In = Green from Bat-100
+ 12 vdc Out = **NOT USED** on Bat-100
+ 5 vdc Out = **NOT USED** on Bat-100

Back View

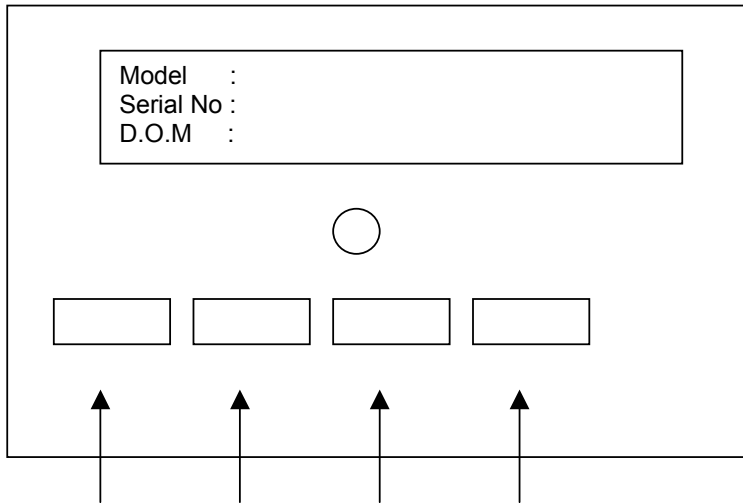

Display Functions

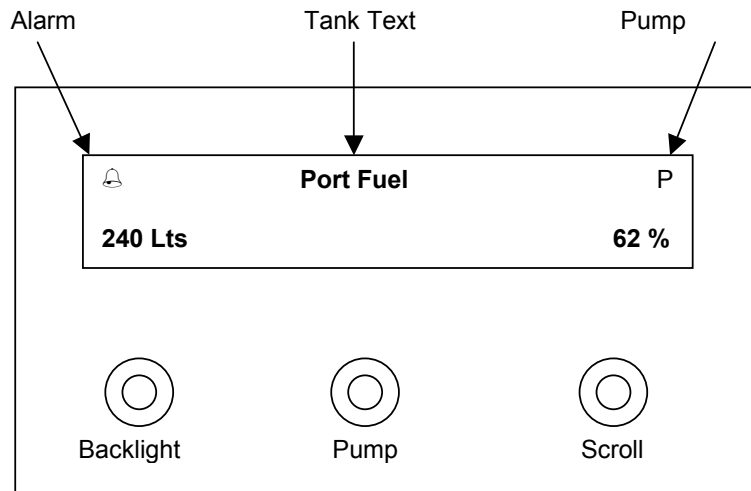

Display Mode 1



Display Mode 2




This system has 2 display modes. See point 3 on page 10 - Operating Instructions to change.

Programming Instructions

NOTE: Program Input & Calibrate must be preformed for each tank

Step 1: Placing the unit in Program Mode

Press and hold down the Backlight key now press and hold the Scroll key. Hold together for 3 seconds.

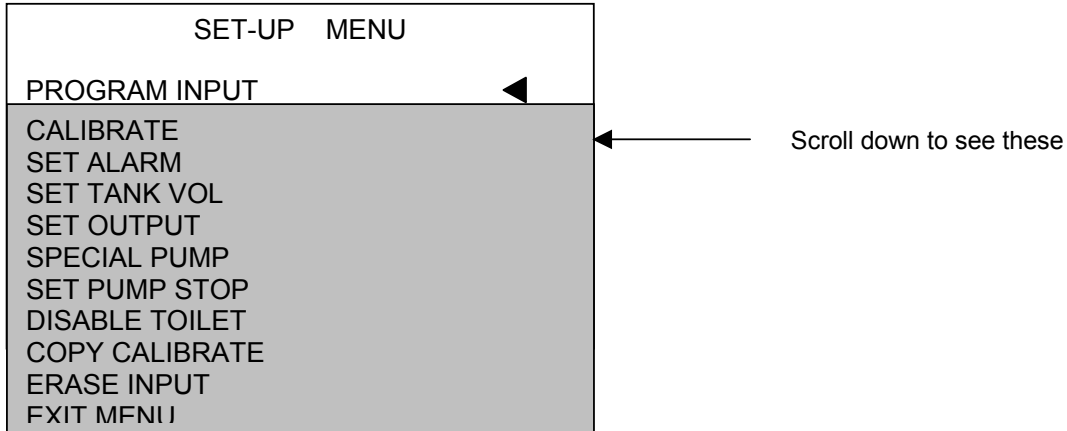


This will bring you to the Set-Up Menu.

Press the Scroll or Backlight key to scroll through the Set-Up Menu or Press the Pump key to program an Input.

Step 2: Selecting an Input to program

Once in program mode each Input can be individually programmed.


The display will now show:



Use the Scroll or Backlight key to scroll to the Input requiring programming. Press the Pump key once the input to be programmed has been found.

Step 3: Selecting Tank or Battery Name

The display will now show:




Use the Scroll or Backlight key to scroll through the pre-programmed tank names. Press the Pump key once the required tank name has been found. If you want the name selected press the Pump key again, otherwise if you want to change the name see next Step 3a.

Step 3a: Changing Tank Name Text

The tank name text may be changed. After selecting the Tank (name), as above, use the Backlight key to move the cursor to each individual letter and the Scroll key to scroll through the alphabet. When finished, press the Pump key to enter.

Step 4: Selecting Type

The display will now show:




Use the Scroll or Backlight key to scroll through the various tank types. Press the Pump key once the appropriate tank type has been found. **Note:** The tank type only sets where the alarm point starts.

If the Battery is selected see Step 5a.

Step 5: Setting the Alarm point for Tank


The display will now show:



The alarm point is the point where the tank will alarm you. E.g. almost or empty, almost or full. Use the Scroll or Backlight key to move the alarm point to the desired level. Press the Pump key to set this as your alarm point.

Step 5a: Setting the Alarm point for Low Battery


The display will now show:



The alarm point is the point where the battery will alarm you when it's low. This can be set at any level. Use the Scroll or Backlight key to move the alarm point to the desired level. Press the Pump key to set this as your alarm point.

Step 6: Audible Alarm

The display will now show:



Press the Scroll key to select "Yes" or the Backlight key to select "No". If Yes is selected the audible alarm will sound based on the alarm point set, as above. If No is selected there will be no audible alarm, associated with that input, only a visual bell.

Note: If this is a battery, the system will now return you to the Set-Up Menu. If this is a tank go to Step 7.

Step 7: Tank Volume

The display will now show:

Set Tank Volume < No Yes >
--

This allows for displaying the tank volume in either Litres or Gallons. If this feature is required press the Scroll key to select "Yes". Next select "Lts" for Litres or "Gals" for Gallons.

The display will now show " Set Volume 00000 ". Use the Backlight and Scroll keys to change the value and the Pump key to enter and move to the next digit. When the last digit is reached and the Pump key is pressed the system will return to the Set-Up Menu.

Otherwise press the Backlight key to select "No".

If No is selected the system will return to the Set-Up Menu. Once back at the Set-Up Menu repeat this process for all additional Inputs.

Note: After a tank has been programmed individual settings may be changed. From the Set-Up Menu scroll to the option you wish to change and press the Pump key. You can now change that particular setting as per the instructions.

Set Outputs

The TD-4000 has two outputs and can be associated with any of the inputs. To set up this feature, scroll down to "Set Output" (in the Set-Up Menu) and press the Pump key.

The display will now show:

Tank Name ? Select Input 1

Press the Scroll or Backlight key to scroll to the Input you want to select and press the Pump key.

The display will now show:

Program Output < No Yes >

This allows you to exit in the event that you have made a mistake with regards to which Input you would like to attach an Output. If you would like to escape then press the Backlight key. This will return you to the Set-Up Menu. Otherwise press the Scroll key to continue.

The display will now show:

Program Output Output Number 1

Press the Scroll or Backlight key to move between Output 1 & 2. Once the desired Output is displayed, press the Pump key. This has now been set and the system will return to the Set-Up Menu.

This setting can be changed at any time by selecting this option from the menu and following the on screen directions.

Pump Output:

The TD-4000 has two Pump Output controls and works as follows:

If used for Black or Grey you can turn it ON and OFF manually or if ON will turn OFF automatically when the tank is empty.

If used for Water you can turn it ON and OFF manually or if ON will turn OFF automatically when the tank reaches the programmed low alarm point.

If used for Fuel you can turn ON and OFF manually or if ON will turn OFF automatically when the tank is full.

If a tank type has been programmed as a Day Fuel (see Step 4) the Output will automatically turn ON at the programmed low alarm point and turn OFF when the tank is full.

Special Pump:

If the Black tank has a charcoal filter fitted and you are using a pressure sensor you will need to use this feature.

Explanation: When the pump is turned on liquid is removed from the tank quicker than air can replace it due to the constrictive nature of the air filter. This will cause a pressure drop, the system will think the tank is empty and turn the pump off.

The Special Pump feature will allow the pump to run for a pre-set time without looking at the tank level (which will be wrong due to the above reason), the pump will then turn Off for 20 seconds allowing the tank to equalize its pressure. The system will then look at the tank level and turn the pump back On for a time period. This time will be based on the tank level e.g. If the tank level is low, the time period will be short. This will continue until the tank is empty.

If this feature is selected then, when the pump is On, the display will show -----PUMPING-----.

When the pump is Off, during the equalizing time, the display will show -----EQUALIZING-----.

Scroll down to "Special Pump" and press the Pump key.

The display will now show:

Special PumpOut		
< No		Yes >

Press the Scroll key to select "Yes" or the Backlight key to select "No".

If No is selected the feature will not be turned on and the system will return to the Set-Up Menu.

If Yes is selected, **The display will now show:**

Set Time		
< Default		Set >

This is the time period the pump will run (if full) before looking at the tank level.

Either Default or Set maybe selected.

If "Default" is selected the time period will be set to 3 minutes and the system will return to the Set-Up Menu.

If "Set" is selected, **The display will now show:**

Set Time		
Set Minutes	=	1

Use the Scroll Key to scroll through the times 1 to 5 minutes. Press the Pump key to enter. The system will now return to the Set-Up Menu.

Set Pump Stop:

This feature allows you to set when the Black or Grey pump will be turned Off (default = empty). This can be set up by selecting the “Set Pump Stop” option from the Set-Up Menu and selecting the tank you wish to set this up on. Use the Scroll or Backlight keys to set the pump stop point. Once this is complete press the Pump Key and you will return to the Set-Up Menu. Repeat for extra tanks that require this feature.

Disable Toilet:

From the Set-Up Menu scroll down to “DISABLE TOILET” then press the Pump key.

The display will now show:

Disable Toilet	
< No	Yes >

If “Yes” is selected (by pressing the Scroll key) this will set Output two (white wire) to short to GND when the Black Tank reaches the alarm point and turn Off 12 displays bars below this point.

If No is selected you will return to the main MENU.

Copy Calibrate:

This function allows you to copy the calibrations setting from one input to another.

NOTE: please ensure you have calibrated the input you are coping FROM.

From the Set-Up Menu scroll down to “COPY CALIBRATE” then press the Pump key.

The display will now show:

Copy From	
Select Input	1

Use the Scroll key to scroll to the input you want to copy FROM and press the Pump Key to enter.

The display will now show:

Copy to	
Select Input	1

Use the Scroll key to scroll to the input you want to copy TO and press the Pump Key to enter, you will now be returned to the main MENU.

Erasing Inputs:

From the Set-Up Menu scroll down to “ERASE INPUT” then press the Pump key.

The display will now show:

Erase Input	
< No	Yes >

If “Yes” is selected (by pressing the Scroll key) –

The display will now show:

Tank Name ?
Select Input 1

Use the Scroll or Backlight key to find the Input to erase, and then press the Pump key to erase that Inputs data, the system will then return back to the Set-Up Menu.

If “No” is selected (by pressing the Backlight key) an inputs data will NOT be erased and the system will return back to the Set-Up Menu.

Exit Menu

Once all required inputs have been calibrated and programmed, you can exit from the Set-Up Menu by pressing the Scroll key until “Exit Menu” is displayed, then press the Pump key. This will save all associated data that has been set and take the system out of Set-Up mode and into Monitoring mode. The TD-4000 is now ready for use!

Operating Instructions:

1/ Pressing the Backlight key will turn the backlight ON, press again to turn OFF.

2/ Press the Scroll key to alternate between tanks.

3 /Press and hold the Scroll for 4 seconds to alternate between display modes.

4/ Pressing the Pump key will turn the pump (power) ON, press again to turn OFF.
If a pump is turned ON a “P” will be displayed in the top right section of the display.

The Pump key will also act as the Mute key if an alarm is on. E.g. if the alarm is ON the first press will mute the alarm, the second press will turn the pump ON or OFF.

Audio Alarm:

The audio alarm can be turned ON or OFF by holding down the Backlight key for 3 seconds, you will hear a bleep after every second. After 3 bleeps you may release the key. If the audible alarm is turned off there will still be a visual alarm (bell icon).

The bell icon will flash when the tank with the alarm is scrolled to otherwise it will remain on solid. A solid bell indicates there is an alarm, but not for the tank being displayed.

Sensor Installation

! WARNING !

PLEASE NOTE: For sensor Model SEN-100 The Maximum Tank Height is 1 Meter

PLEASE NOTE: For sensor Model SEN-250 The Maximum Tank Height is 2.5 Meter

The maximum surge and safe pressure is 28psi.

For more information see "Calibration Tips & Tricks" on our web site www.smartswitch.co.nz


Mounting Adaptors Available:

A range of mounting adaptors are available which includes flat sidewall, top mount, 1.5" pipe, 2" pipe, 3" pipe and drain valve. **Ask your dealer for details.**

Should a 4 to 20-milliamp loop sensor supplied by another manufacturer be used, then the adaptor (part number SM-420) will need to be installed.

Sensor Installation:

The sensor should be mounted as low in the sidewall as possible using a 3/4" spin-in or the flat sensor adaptor. If the sensor adaptor is used it will require drilling a 5/8" hole in the sidewall. Apply silicon glue liberally to the bottom of the adaptor. Using #10 x 1/2" stainless steel self-tapping screws attach the adaptor to the sidewall. Once the adaptor is attached make sure that the hole in the adaptor is clear of any excess glue. Allow drying as per the instructions for the glue. Wrap the threads of the sensor using Teflon plumbers tape and install the sensor. Tighten by hand. It is not recommended to install the sensor in the bottom of the tank. Although the sensor will operate correctly it will provide an area for debris to collect which would be difficult to flush out.

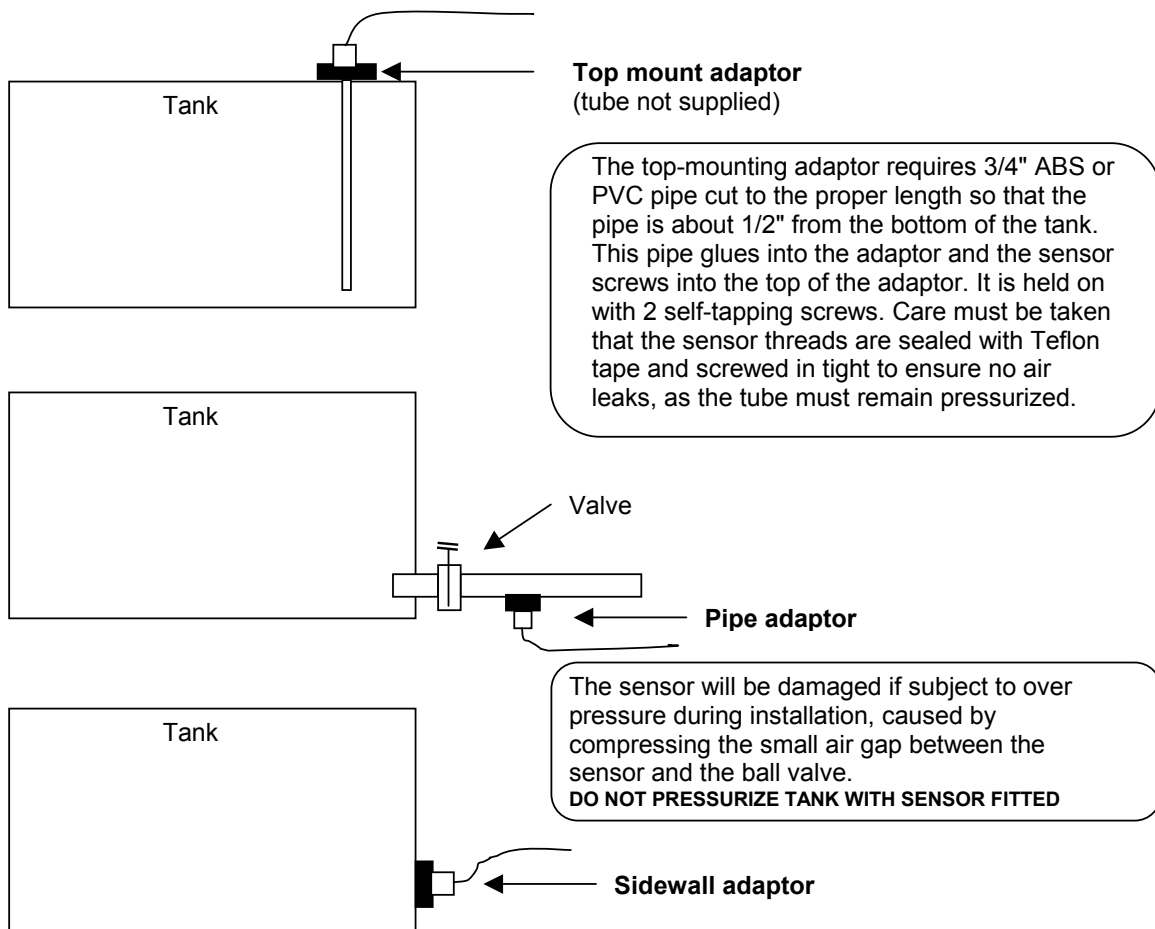

Sensor Programming Instructions

Placing the unit in Calibrate Mode

Press and hold down the Backlight key now press and hold the Scroll key. Hold together for 3 seconds. This will bring you to the Set-Up Menu.

SET-UP MENU
PROGRAM INPUT
CALIBRATE ◀
SET ALARM SET TANK VOL ERASE INPUT EXIT MENU

Use the Scroll or Backlight key to scroll to “Calibrate” and press the Pump Key. This will bring you to the Calibrate Menu.

The display will now show:

Tank Name ? Select Input 1

Use the Scroll or Backlight key to scroll to the tank input requiring calibrating. Press the Pump key once the input to be calibrated has been found.

The display will now show:

CALIBRATE MENU
PRESSURE ◀
ULTRA-SONIC 10 – 180 OHM 33 – 240 OHM OTHER SENDER TOP ONLY BOTTOM ONLY EXIT MENU

Use the Scroll or Backlight key to scroll through the list of sensor options. Once you have found the appropriate sensor type, press the Pump key.

If Pressure is selected the display will now show:

Calibration Mode < 2 Pt 5 Pt >
--


Two different methods of tank programming are available if using the pressure sensor:

2 Point Calibration: sets tank low and high points which can only be used if the tank is a regular shape.

5 Point Calibration: sets tank low, tank quarter, tank half, tank three quarters and tank full points, offering more accuracy if the tank is an irregular shape.

Press the Scroll or Backlight key to select either 2 or 5 Point Calibration.

2 Point Calibration: (Bottom & Top)

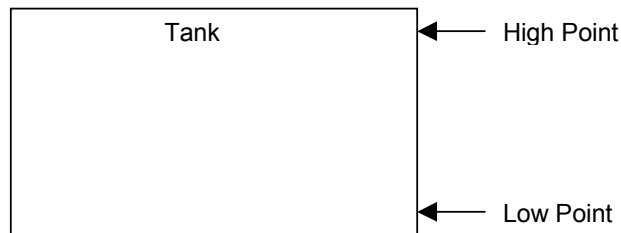

The display will now show:

Set Empty Point
Push Pump To Ent

Fill the tank to the required TANK LOW LEVEL, minimum suggested is liquid just covering the sensor. Wait for approx. 60 seconds for the fluid to settle and press the Pump key. The display will show "Setting Empty Please Wait".

The display will now show:

Set Full Point
Push Pump To Ent

Fill the tank to the TANK HIGH LEVEL. Wait for approx. 60 seconds for the fluid to settle and press the Pump key. The display will show "Setting Full Please Wait". When the system has finished calculating, (could take a few moments) the display will show " Calibration Finished " and the system will return you to the Set-Up Menu.


Once back at the Set-Up Menu repeat this process. This must be repeated for all additional Inputs.

If no fluid is added the display will show:

Value Not Larger
Please Try Again

For more information see "Calibration Tips & Tricks" on our web site www.smartswitch.co.nz

5 Point Calibration: (Bottom, 1/4, 1/2, 3/4 & Top)

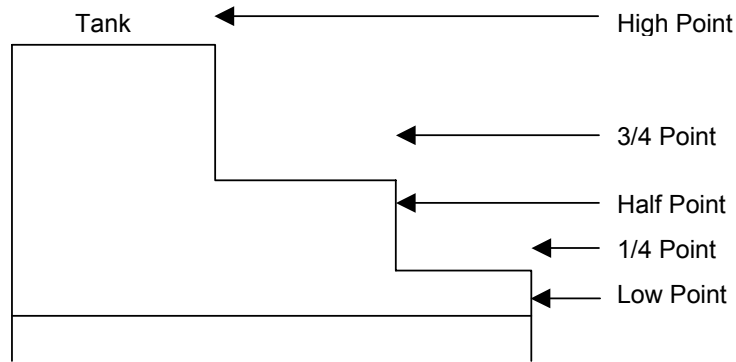

The display will show:

Set Empty Point
Push Pump To Ent

Fill the tank to the required TANK LOW LEVEL, minimum suggested is liquid just covering the sensor. Wait for approx. 60 seconds for the fluid to settle and press the Pump key. The display will show "Setting Empty Please Wait".

The display will now show:

Set 1/4 Point
Push Pump To Ent

Fill the tank to the 1/4 LEVEL. Wait for approx. 60 seconds for the fluid to settle and press the Pump key. The display will show "Setting 1/4 Please Wait".

The display will now show:

Set 1/2 Point
Push Pump To Ent

Fill the tank to the 1/2 LEVEL. Wait for approx. 60 seconds for the fluid to settle and press the Pump key. The display will show "Setting 1/2 Please Wait".

The display will now show:

Set 3/4 Point
Push Pump To Ent

Fill the tank to the 3/4 LEVEL. Wait for approx. 60 seconds for the fluid to settle and press the Pump key. The display will show "Setting 3/4 Please Wait".

The display will now show:

Set Full Point
Push Pump To Ent

Fill the tank to the FULL LEVEL. Wait for approx. 60 seconds for the fluid to settle and press the Pump key. The display will show "Setting Full Please Wait". When the system has finished calculating, (could take a few moments) the display will show " Calibration Finished " and the system will return to the Set-Up Menu.

Once back at the Set-Up Menu repeat this process. This must be repeated for all additional Inputs.

If no fluid is added between each step the display will show:

Value Not Larger
Please Try Again

For more information see "Calibration Tips & Tricks" on our web site www.smartswitch.co.nz

If Ultra-Sonic is selected: the display will show " Calibration Finished " and the system will return to the Set-Up Menu. This is because the Ultra-Sonic sensor is to be pre-calibrated with its own hardware/software.

NOTE - Please see Programming Instructions for Ultra-Sonic sensor in the manual supplied with the sensor.

If 10-180 Ohm is selected: the display will show " Calibrating Please Wait ".When the system has finished calculating, (could take a few moments) the display will show " Calibration Finished " and the system will return to the Set-Up Menu.

If 33-240 Ohm is selected: the display will show " Calibrating Please Wait ".When the system has finished calculating, (could take a few moments) the display will show " Calibration Finished " and the system will return to the Set-Up Menu.

If Other Sender is selected: this is the same as selecting Pressure – see instructions for Pressure on page 12.

After calibrating the bottom and top settings of a tank you may wish to go back and change either of these settings individually.

If Top Only is selected: the system will read the current level of the tank and calibrate this as the top level for that particular tank. The system will then return to the Set-Up Menu.

If Bottom Only is selected: the system will read the current level of the tank and calibrate this as the bottom level for that particular tank. The system will then return to the Set-Up Menu.

To Exit from the Calibrate Menu: scroll down to "Exit Menu" and press the Pump key. This will take you out of the Calibrate Menu and return you to the Set-Up Menu.

TD-4000 Mounting

“ Warning ”

If the display unit is being installed in an area where it may get wet or experience moisture, please ensure a bead of silicon is placed behind the unit to prevent water entering via the connection cable.

